

AMP

Multi-Channel Remote



FCC Compliance


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- [1] This device may not cause harmful interface, and
- [2] This device must accept any interference received, including interference that may cause undesired operation.

Package Contents

- 1 x 15 channel remote
- 1 x magnetic holder including wall fixing screws
- 1 x 3V CR2450 battery

Remote Buttons

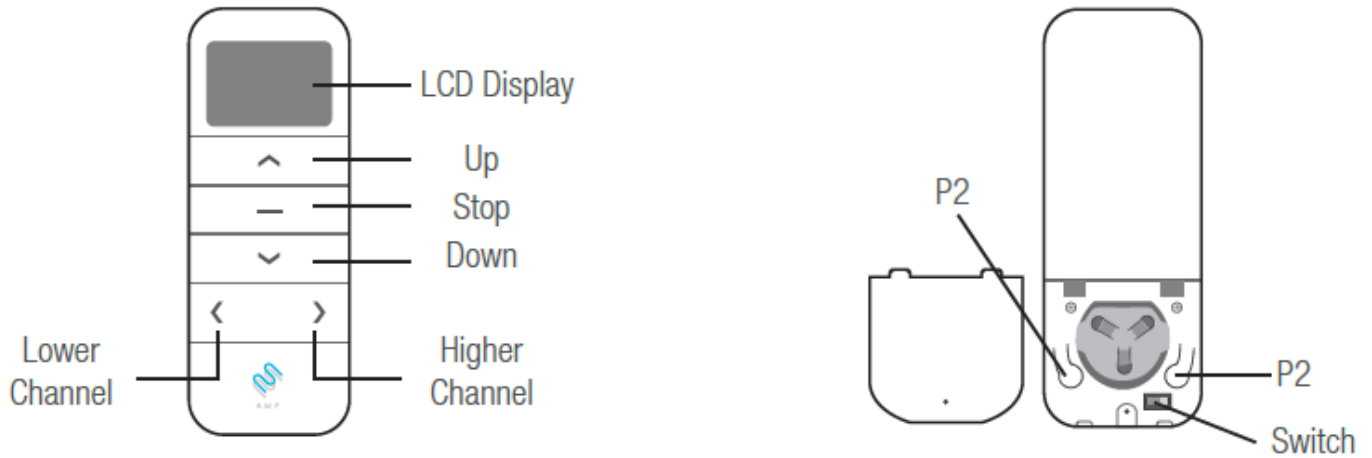


Battery replace/install CR2450

A) Gently press down on the cover

B) Install battery (CR2450) with positive (+) side facing up.

C) gently assemble the cover back

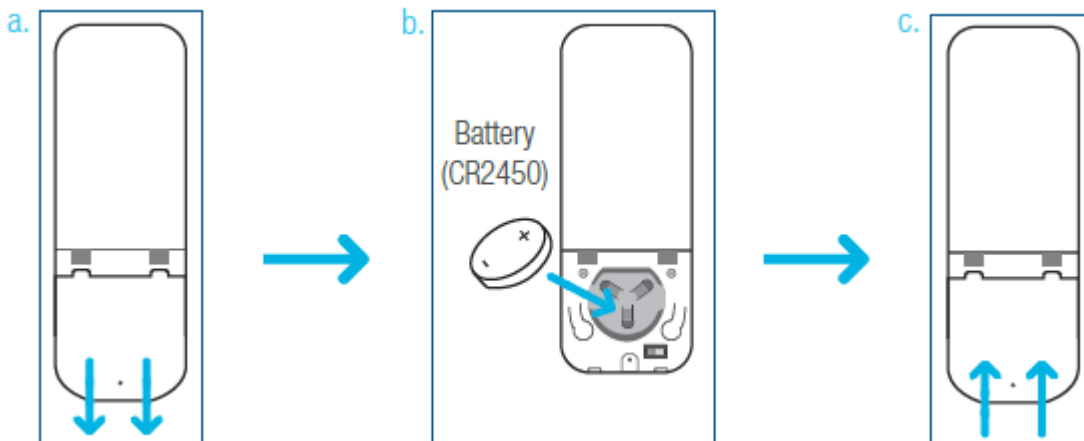


Operation

Changing Channel




- A) Press "<" on the remote to select a lower channel.
- B) Press ">" button on the remote to select a higher channel.

Channel 0 is an automatic ALL channel.

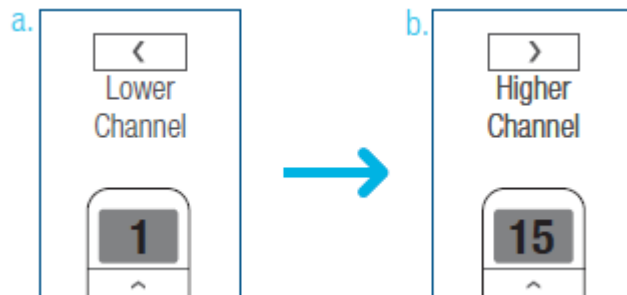


Lock Limit Setting Mode

- A) Remove the cover from the backside of the remote. The lock switch is in the right corner.
- B) Move the switch to the "Lock" position to disable the following commands. The remote will show a "L" on the front screen
 - Change Motor Direction
 - Setting the Upper and Lower Limit
 - Adjust Limit
- C) Move the switch to "Unlock" position to assess all remote functions. The remote will display a "U" on the front screen.

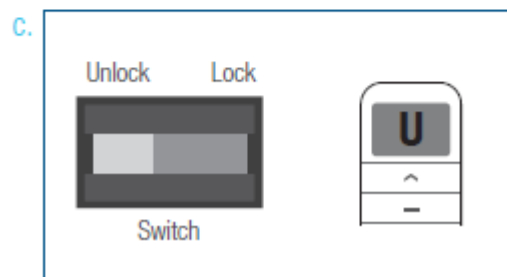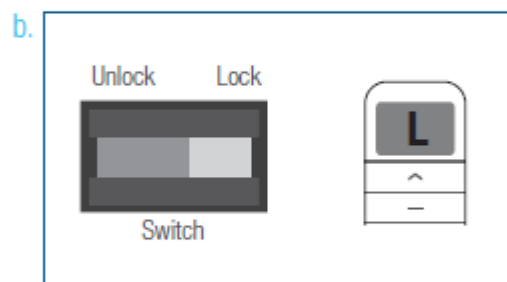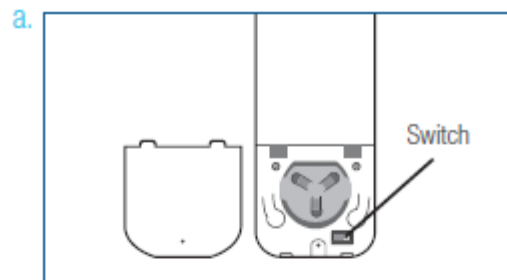

Installation Notes

IMPORTANT: Upper and Lower limit will be set by the factory. You just need to pair the motor to your remote Go to Step 5. If you need to adjust limits please go to Step 6 & 7

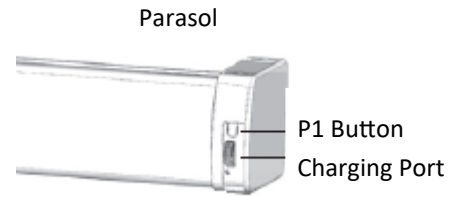

Programming—After Factory Reset


[1] Pairing motor to remote

Select channel on controller



NOTE: Channel 0 is an automatic ALL channel.

Hold **P1** button on the motor head

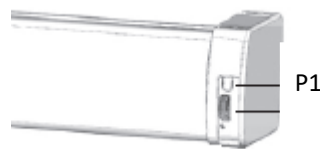

Motor Response



Hold **STOP** on controller



Motor Response



[2] Checking motor direction

To check travel direction of shade, press **UP** or **DOWN** on controller.



Shade will only move in small movements when you press and release a direction

To reverse shade direction, hold both **UP** and **DOWN**.



Motor Response



Programming—After Factory Reset (Continued)

[3] Setting limits

Move shade to desired highest or lowest position by pressing the **UP** or **DOWN** button



Holding **DOWN** will make the shade travel. Pressing and releasing the **DOWN** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

Holding **UP** will make the shade travel. Pressing **UP** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

Once you are at your upper limit, hold **UP** and **STOP** until the shade jogs.



Once you are at your lower limit, hold **DOWN** and **STOP** until the shade jogs.



DONE!

Pairing - motor information to remote

[4] Pairing programming information from motor to remote.

Select channel on controller



NOTE: Channel 0 is an automatic ALL channel.

Hold **P1** button on the motor head for 1 jog then release



Motor Response

Within 5 seconds hold **STOP** on controller



Motor Response



JOG X1



JOG X2

Adjusting Upper Limit

[5] You can do this at ANY position. Shade does not need to be at the current upper limit.

Hold **UP** and **STOP** on the controller.



Move shade to desired position



Hold **UP** and **STOP** on the controller.



Adjusting Lower Limit

[6] You can do this at ANY position. Shade does not need to be at the current lower limit.

Hold **DOWN** and **STOP** on the controller.



Move shade to desired position




Hold **DOWN** and **STOP** on the controller.



Copy / Delete channels

{7} Hold P1 button on the motor head for 1 jog.

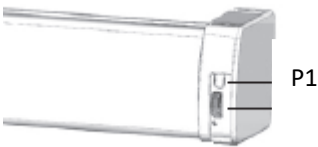

Select channel you wish to add or delete




Hold the **STOP** button on the controller



Delete All Settings

***** Doing this will erase all motor settings and all paired remotes *****


Hold P1 motor head button for 4 continuous jogs. Once completed go back to Step 1.

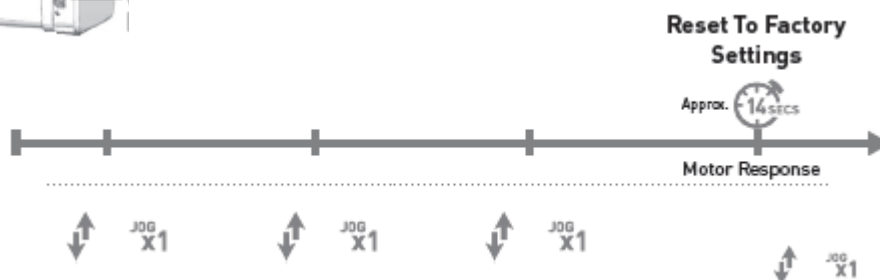

Putting motor to sleep

You will need to put a motor to sleep if you are going to program multiple shades on the same channel or adjust a limit for a specific shade on a group channel. To wake the shade up just press and release the P1 motor head button.

Hold P1 on the motor head
for 2 continuous jogs

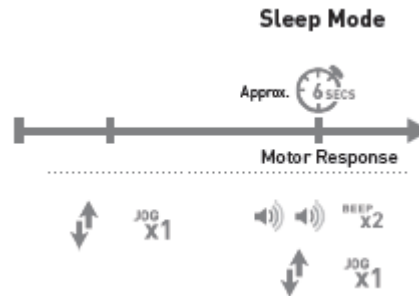


Favorite Position


Move shade to the desired favorite position



Remove battery door on remote.
Press and release P2 on the corner.
The shade will jog once.

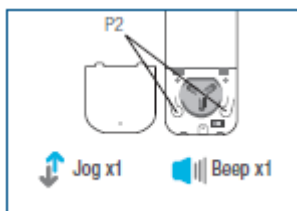

Press and release the **STOP**
button on the controller
and the shade will jog

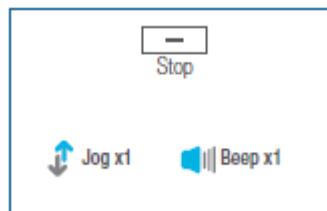

Press and release the **STOP**
button on the controller
and the shade will jog
twice



To activate your favorite position hold the **STOP** button for approx 2 seconds. Once the shades starts to move towards your favorite position then you can release the stop button.

Adjusting Motor Speed

Remove battery door on remote.
Press and release P2 on the upper
left corner. The shade will jog once.



Only 3 speeds available
(34rpm, 40rpm & 50rpm).
Default speed is 50rpm



To Increase speed

Press **UP** shade will make 1

jog



Press **UP** shade will make 2

jogs



To decrease speed

Press **DOWN** shade will

make 1 jog



Press **DOWN** shade will

make 2 jogs

