

allure[®] Transitional Shades




Tools Needed

Sidelight Installation Instructions

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.


Variations are the appeal of Allure...
The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

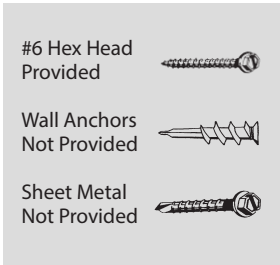

Fasteners


BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

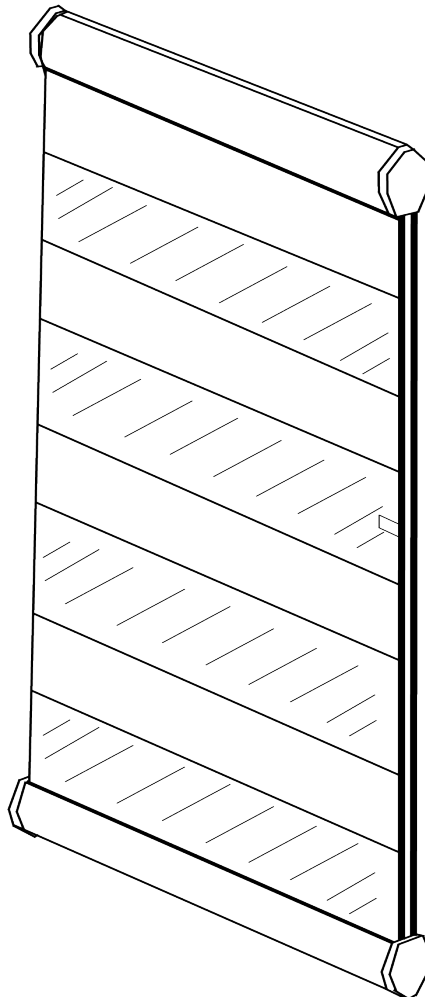


allure® Transitional Shades


Installation Instructions

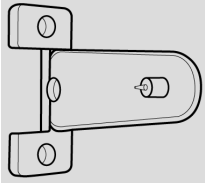

3/4" Outside Mount Bracket
#15-2010

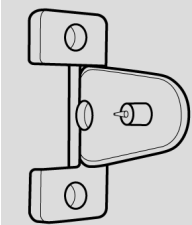

3/8" Inside Mount Bracket
#15-2009

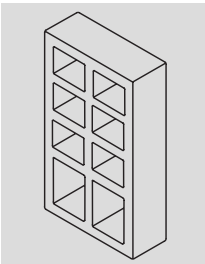

Spacer Block

INSTALL THE BRACKETS

Outside Mount

Hold Sidelight shade evenly in window opening.

Make a pencil mark on right or left side of shade headrail. (Fig. A)

Place the 3/4" Outside Mount Bracket (#15-2010) on pencil mark (Fig. B), drill and tighten screws into the bracket.



Fig. A

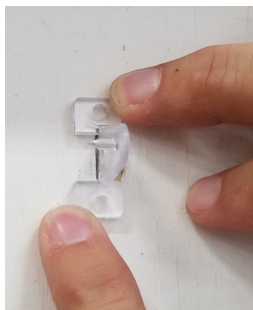


Fig. B

Step 1 (OB)

INSTALL THE BRACKETS AND SHADE

Inside Mount

Place right or left 3/8" Inside Mount Bracket (#15-2009) into opening.

Insert shade into bracket while holding the other bracket into the end of the headrail. Place shade in desired depth of window opening.

While holding in place, drill and tighten front screw into bracket. (Fig. C)

Gently pull shade forward and reach behind to insert/drill back screw into bracket.



Fig. C

Step 1 & 2 (IB)

INSTALL THE SHADE

Outside Mount

Place Sidelight shade onto the mounted bracket, while holding the other end bracket in shade and tilting up bottom of headrail to be level.

Making sure shade is level, drill and tighten top screw into bracket. (Fig. D)

Drill and tighten screw into bottom hole of the bracket. (Fig. E)



Fig. D



Fig. E

Step 2 (OB)

INSTALL ADHESIVE HEM GRIP

Peel backing from adhesive hem grip. At desired height for easy reach and operation, onto a **solid** vane of the front panel, wrap adhesive so half is adhered to the front side and the other half adhered to the back. (Fig. F)

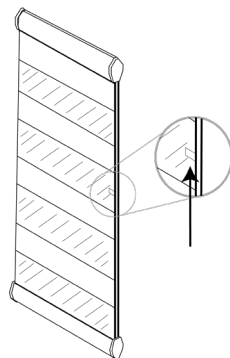


Fig. F

INSTALL HOLD-DOWNS (Optional)

See Hold-Down Installation Instructions

Step 3

CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

Note: In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".



18-8004-SIDE NOV 2018