

Installation Instructions

Magnetic Hold Down



Thank You

Thank you for choosing Genesis Custom Window Shades.
With proper installation and care, your new shades will provide many years of beauty and performance.

Before Installing

Remove shade from the package. Keep all packaging until shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed on your specific mounting surface.

Tools




Screw Driver



Drill

Fasteners



wood
(provided)




drywall,
plaster
(not provided)




metal
(not provided)

Step 1

Mark Position of Hold Down Bracket

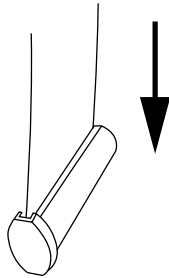



Lower Shade to desired length

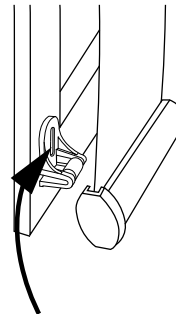

Place Magnetic Hold Down bracket on the mounting surface where it makes contact with the bottom rail and mark location.

Step 2

Attach Magnetic Hold Down Bracket

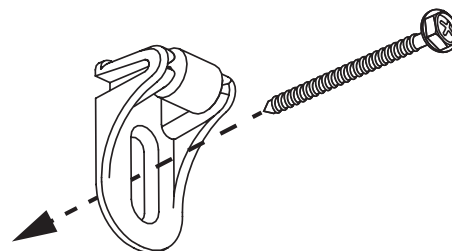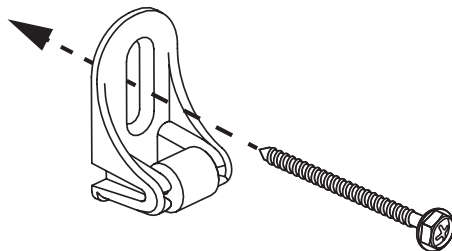

Use the screws provided to mount the Hold Down Bracket to the mounting surface in the desired orientation