genesis®

Installation Instructions

Small Cassette, Modern, Modern Plus, and Large Cassette
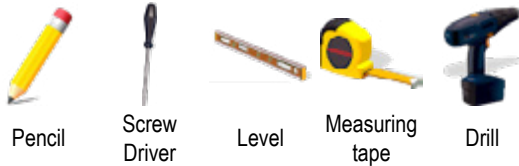
LAFAYETTE interior fashions™

Thank You

Thank you for choosing Genesis Custom Window Shades.
With proper installation and care, your new shades will provide many years of beauty and performance.
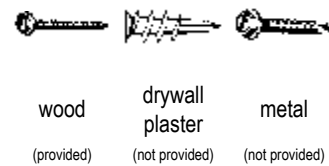
Before Installing

Remove shade from the package. Keep all packaging until shade operates to your satisfaction.
Contents of your hardware package may vary depending on options chosen.
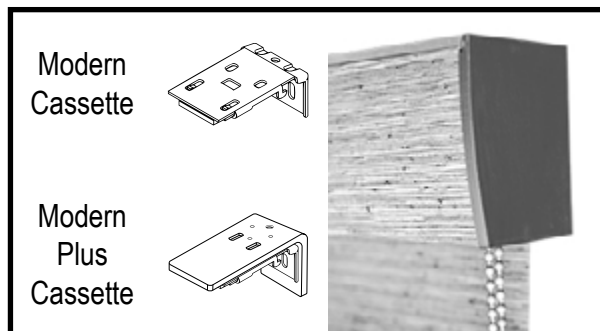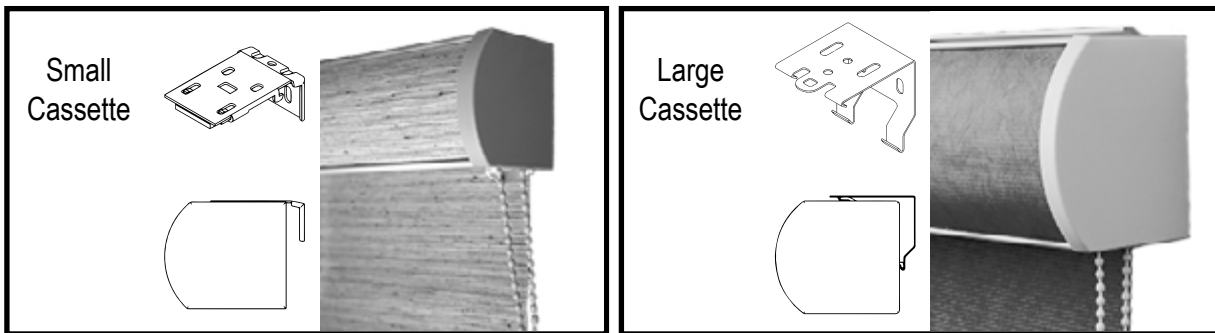Additional fasteners may be needed on your specific mounting surface.

Tools

Pencil	Screw Driver	Level	Measuring tape	Drill

Fasteners

wood	drywall plaster	metal
(provided)	(not provided)	(not provided)

Your Shade

Small Cassette

Large Cassette

Modern Cassette

Modern Plus Cassette

genesis®

Custom Window Shades

Installation Instructions

Step 1	**Space Brackets in Window**

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

2" Max ⟶   ⟵ Space Evenly ⟶   ⟵ Space Evenly ⟶   ⟵ 2" Max

If spacer blocks are being used, place in between mouting surface and brack before attaching with screws
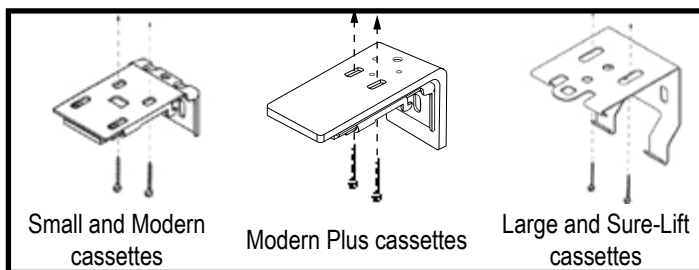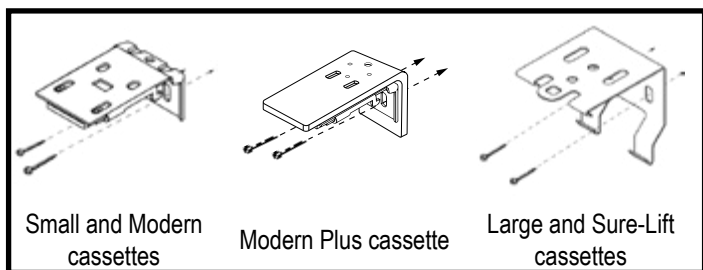
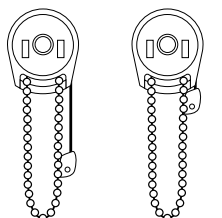| Shade Width	Brackets Required	2-on-1 Headrail
15" - 48"	2	If using 2-On-1 headrail option, a center bracket is required at center gap.
48 1/16" - 72"	3	
72 1/16" - 90"	4	
90 1/16" - 120"	5	
120 1/16" - 156"	6	

Step 2	**Install the Brackets**

Use two screws (and appropriate fasteners if needed) to attach each installation bracket to the top of the window. Brackets **must** be level and aligned.

Outside Mount

Small and Modern cassettes

Modern Plus cassette

Large and Sure-Lift cassettes

Inside Mount

Small and Modern cassettes

Modern Plus cassettes

Large and Sure-Lift cassettes

Step 3	**Install the Shade**

Make sure that the shades are rolled up to the roller before installation

Too Low   **Correct**

Small, Modern and Modern Plus Cassettes

Small and Modern Cassettes
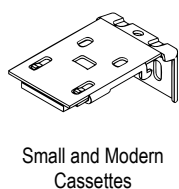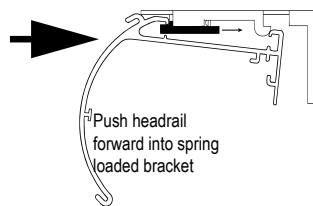
Modern Plus cassette

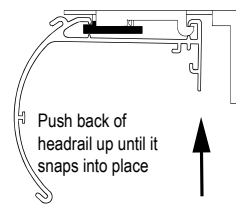Insert the spring loaded tab on the bracket into the front groove on the top of the headrail

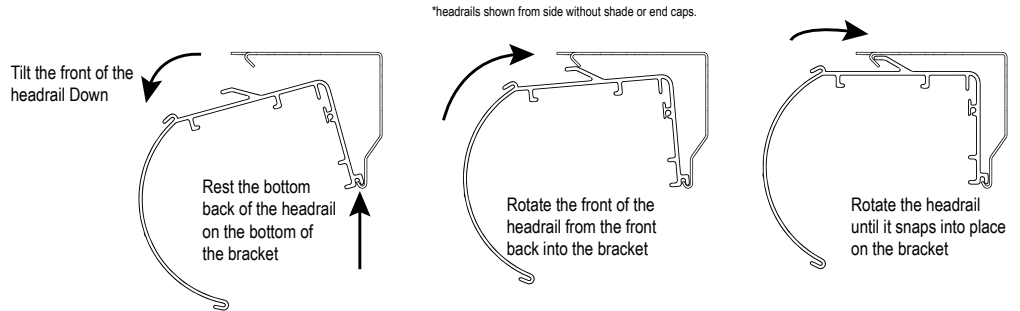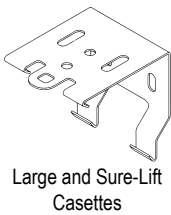*headrails shown from side without shade or end caps.
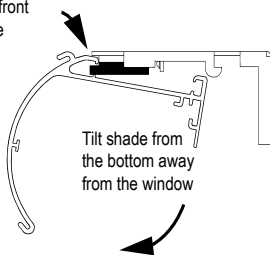
Tilt shade from the bottom away from the window

Push headrail forward into spring loaded bracket

Push back of headrail up until it snaps into place

Large and Sure-Lift Cassettes

*headrails shown from side without shade or end caps.

Large and Sure-Lift Casettes

Tilt the front of the headrail Down

Rest the bottom back of the headrail on the bottom of the bracket

Rotate the front of the headrail from the front back into the bracket

Rotate the headrail until it snaps into place on the bracket

Important: After Cassettes are installed check Each Bracket to make sure they are properly installed and the Cassette is properly seated to ensure proper operation

Step 4   Operate the Shade

Check Shade for proper operation. If shade Skews left or right (does not roll up straight), check that the headrail is level. If headrail is level and the shade still skews, it may require shimming.
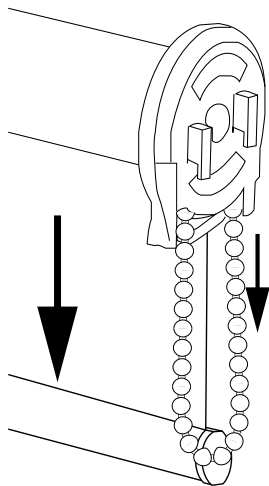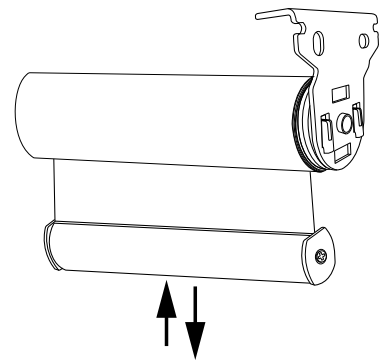
Accu-Rise

Pull gently on the back side of the chain to to lower it.
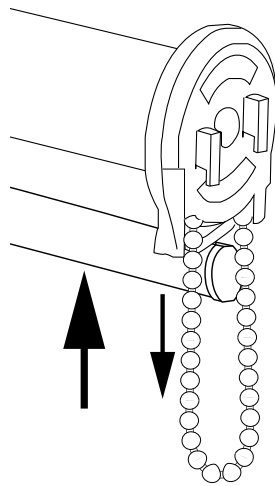
Pull gently on the front side of the chain to to raise it.

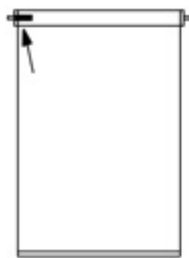Pull Accu-Rise shade gently from the center of the shade to lower it. Push up from center to raise it.

Cassette not shown for clarity
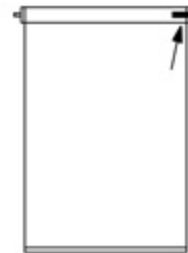
Shimming

If shade veers toward the right (Fig. A)

Lower the shade completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved.
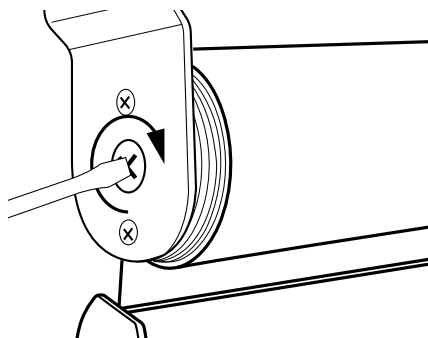
FIGURE A

If shade veers toward the left (Fig. B)

Lower the shade completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved.

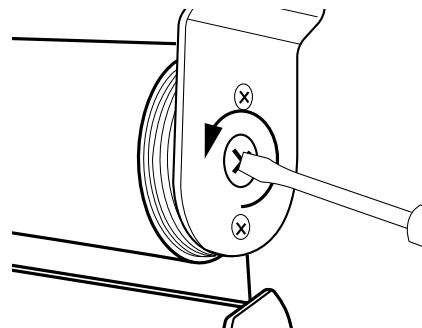FIGURE B

EZ Lift   **Adjust Tension**

Remove any Bracket Covers and locate Control Side

If control side is on the <u>left</u>, the tension is set Counter Clockwise

Start with a Quarter Turn and then raise and lower to check tension until proper tension is achieved

If control side is on the <u>right</u>, the tension is set Clockwise

Start with a Quarter Turn and then raise and lower to check tension until proper tension is achieved

Step 5   **Install Cord Tensioner, Hold Downs**

Cord Tension Lock

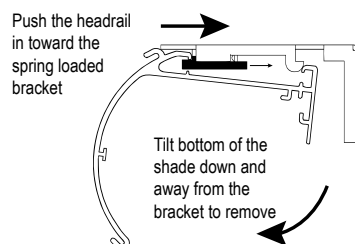See Cord Tension Lock installation instructions

Hold Downs

See Hold-Down installation instructions

Shade Removal

Small and Modern Cassettes

Push the headrail in toward the spring loaded bracket

Tilt bottom of the shade down and away from the bracket to remove

Large and Sure-Lift Cassettes

Insert a flat blade screwdriver into the middle of the bracket under the tab

Tilt top of the shade down and away from the bracket to remove